


HOW TO MAKE BUTTONHOLES, SEW ON BUTTONS, BLIND HEM AND MONOGRAM ON THE WHITE AUTOMATIC ROTARY SEWING MACHINE

2 yds 9"
8 yds 36"
9 yds
1/5
3/5

WHITE

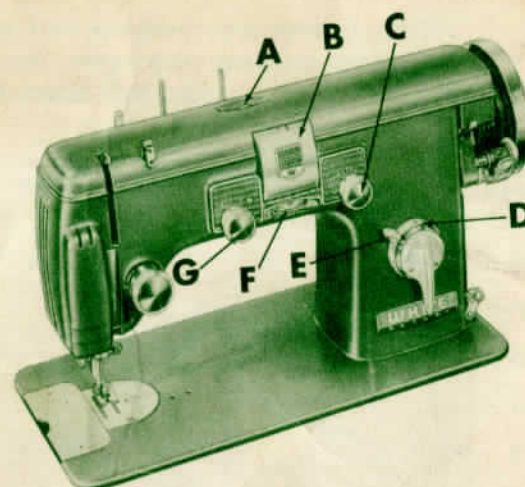

AUTOMATIC

Any of the decorator stitches may be used where and as desired.

Below are just a few suggestions for application of stitches shown.

All normal sewing

Overcasting seams, mending, edgestitching, sewing on lace, appliques

Felled bias seams, elastic shirring, stitching jersey

Blind hems, dainty embroidery on sheer fabrics

Fine embroidery on children's wear, hankies, etc.

Border trim on towels, curtains, pillow slips, etc.

Decorative towel hems, trim on sheets, blankets

Edging on place mats, etc., bold embroidery effects

Trim on collars and cuffs, cowboy shirts, men's ties

Ornamental touches on tucks, ruffles, squaw skirts

Delicate trim on pinafores, aprons, collars

Strong color accent for aprons, towels, curtains

Effective trim on table linens, guest towels, scarves

Monograms, edging, reinforcing seams

Pretty on cotton lingerie, blouses, linens, accessories

"Boutique" touch for gloves, collars, dickeys

BUTTONHOLES

Attach the buttonhole foot, setting length for buttonhole on slide.

Turn indicator (Dial A) to $\sim\sim\sim\sim$

Set stitch length near zero (Dial D) for close stitching.

Set zigzag stitch width to third (|||) mark (Dial C).

Set zigzag width stop at \equiv (Wheel F).

Slide needle position lever to left (Dial G).

When the first stitches reach the length marker, stop the machine with the needle in the material at the right side of stitching.

Raise the presser foot and turn material so that stitches are under the right groove of buttonhole foot.

Turn handwheel to place needle left of buttonhole.

Set zigzag width on fifth (||||) mark (Dial C) and take two or three stitches to bar tack buttonhole. Hold the material back slightly or drop the feed to do this.

Reset the zigzag width to stop \equiv and stitch to end of buttonhole. Stop machine with needle in material left of stitching.

Set zigzag width at fifth (||||) mark, drop the feed and bar tack end of buttonhole.

Return zigzag width to first (|) mark and take a few stitches to tie in threads.

BLIND HEM

Apply seam tape to edge of material, or edgestitch. Turn hem up and baste about 1/4" from finished edge.

On wrong side, fold hem back under garment along basting line. Place under presser foot.

Behind Cover Plate B insert Decorator Disc A-1.

Turn indicator (Dial A) to 1.

Set stitch length at about 2. Set zigzag width at fifth (||||) mark.

Stitch along edge of fold, barely catching in fold with left stroke of zigzag stitch.

SEWING ON BUTTONS, SNAPS OR HOOKS

Attach button foot.

Drop feed by sliding lever (Lever E) up to |||.

Slide needle position lever to left (Dial G).

Turn indicator (Dial A) to $\sim\sim\sim\sim$

Fasten button to material with the point of the needle.

Set zigzag width on first (|) mark (Dial C) Lower presser foot and take a few stitches to tie in thread.

Set zigzag width at fifth (||||) mark or at width corresponding to space between eyes of button, snaps or hooks.

Test width by turning the hand wheel manually.

Do 8 or 10 stitches from hole to hole, stopping on left side. Stop machine. Return zigzag width to 0. Take a few stitches to tie in threads.

Pull threads to wrong side and clip.

MONOGRAMS

Adjust zigzag to width (Dial D) preferred for monogram.

Turn indicator (Dial A) to $\sim\sim\sim\sim$

Drop the feed by sliding lever (Lever E) up to |||.

Set needle position (Dial G) in center.

Remove the presser foot.

Put material, with monogram right side up, in embroidery hoops. Place under needle and lower presser bar.

Take one stitch to pull bobbin thread to right side. Holding thread lightly to start, follow outline of monogram by moving hoop.

How to sew, mend and do decorative stitches quickly and easily on the **WHITE AUTOMATIC ROTARY**

NOTE: Instructions indicate dial settings used to obtain the stitches illustrated. Decorator stitches can be varied to individual tastes by changing the stitch width and length.



Type or Name of Stitch	Decorator Disc Used	Stitch Width Settings Left to Right	Stitch Length Settings	Decorator Stitches	Notes and Comments
Straight	None	1	1 to 5		
Zig-zag	Indicator at	1st to 5th	1 to 5		
Curve (Elastic)	Indicator at	1st to 5th	1 to 5		
Catch Stitch (Blind Hem)	A-1	5th	1 to 2		
Crest	A-2	5th	0 to 1		
Rick-rack	B-1	5th	Near 0		
Blanket	B-2	5th	Near 0		
Diamond	C-1	5th	Near 0		
Arrowhead	C-2	5th	Near 0		
Bead	D-1	5th	Near 0		
Shell	D-2	5th	Near 0		
Spiral	E-1	5th	Near 0		
Sampler	E-2	5th	Near 0		
Satin	Indicator at	1st to 5th	Near 0		
French Knot	Indicator at	3rd	1 to 5 Drop Feed at Equal Intervals		
Daisy	Indicator at	5th	Drop Feed Do 3 or 4 Stitches Pivot on Needle		

Beautiful duplication of the above stitches with TWIN NEEDLES using two threads provides even greater contrast in both design and color.

The Right to Make Design Changes is Reserved by the Manufacturer.